


# TAPE DECK RT-701


KCU

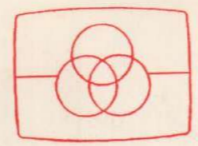

Free service manuals  
Gratis schema's

Digitized by

www.freeservicemanuals.info

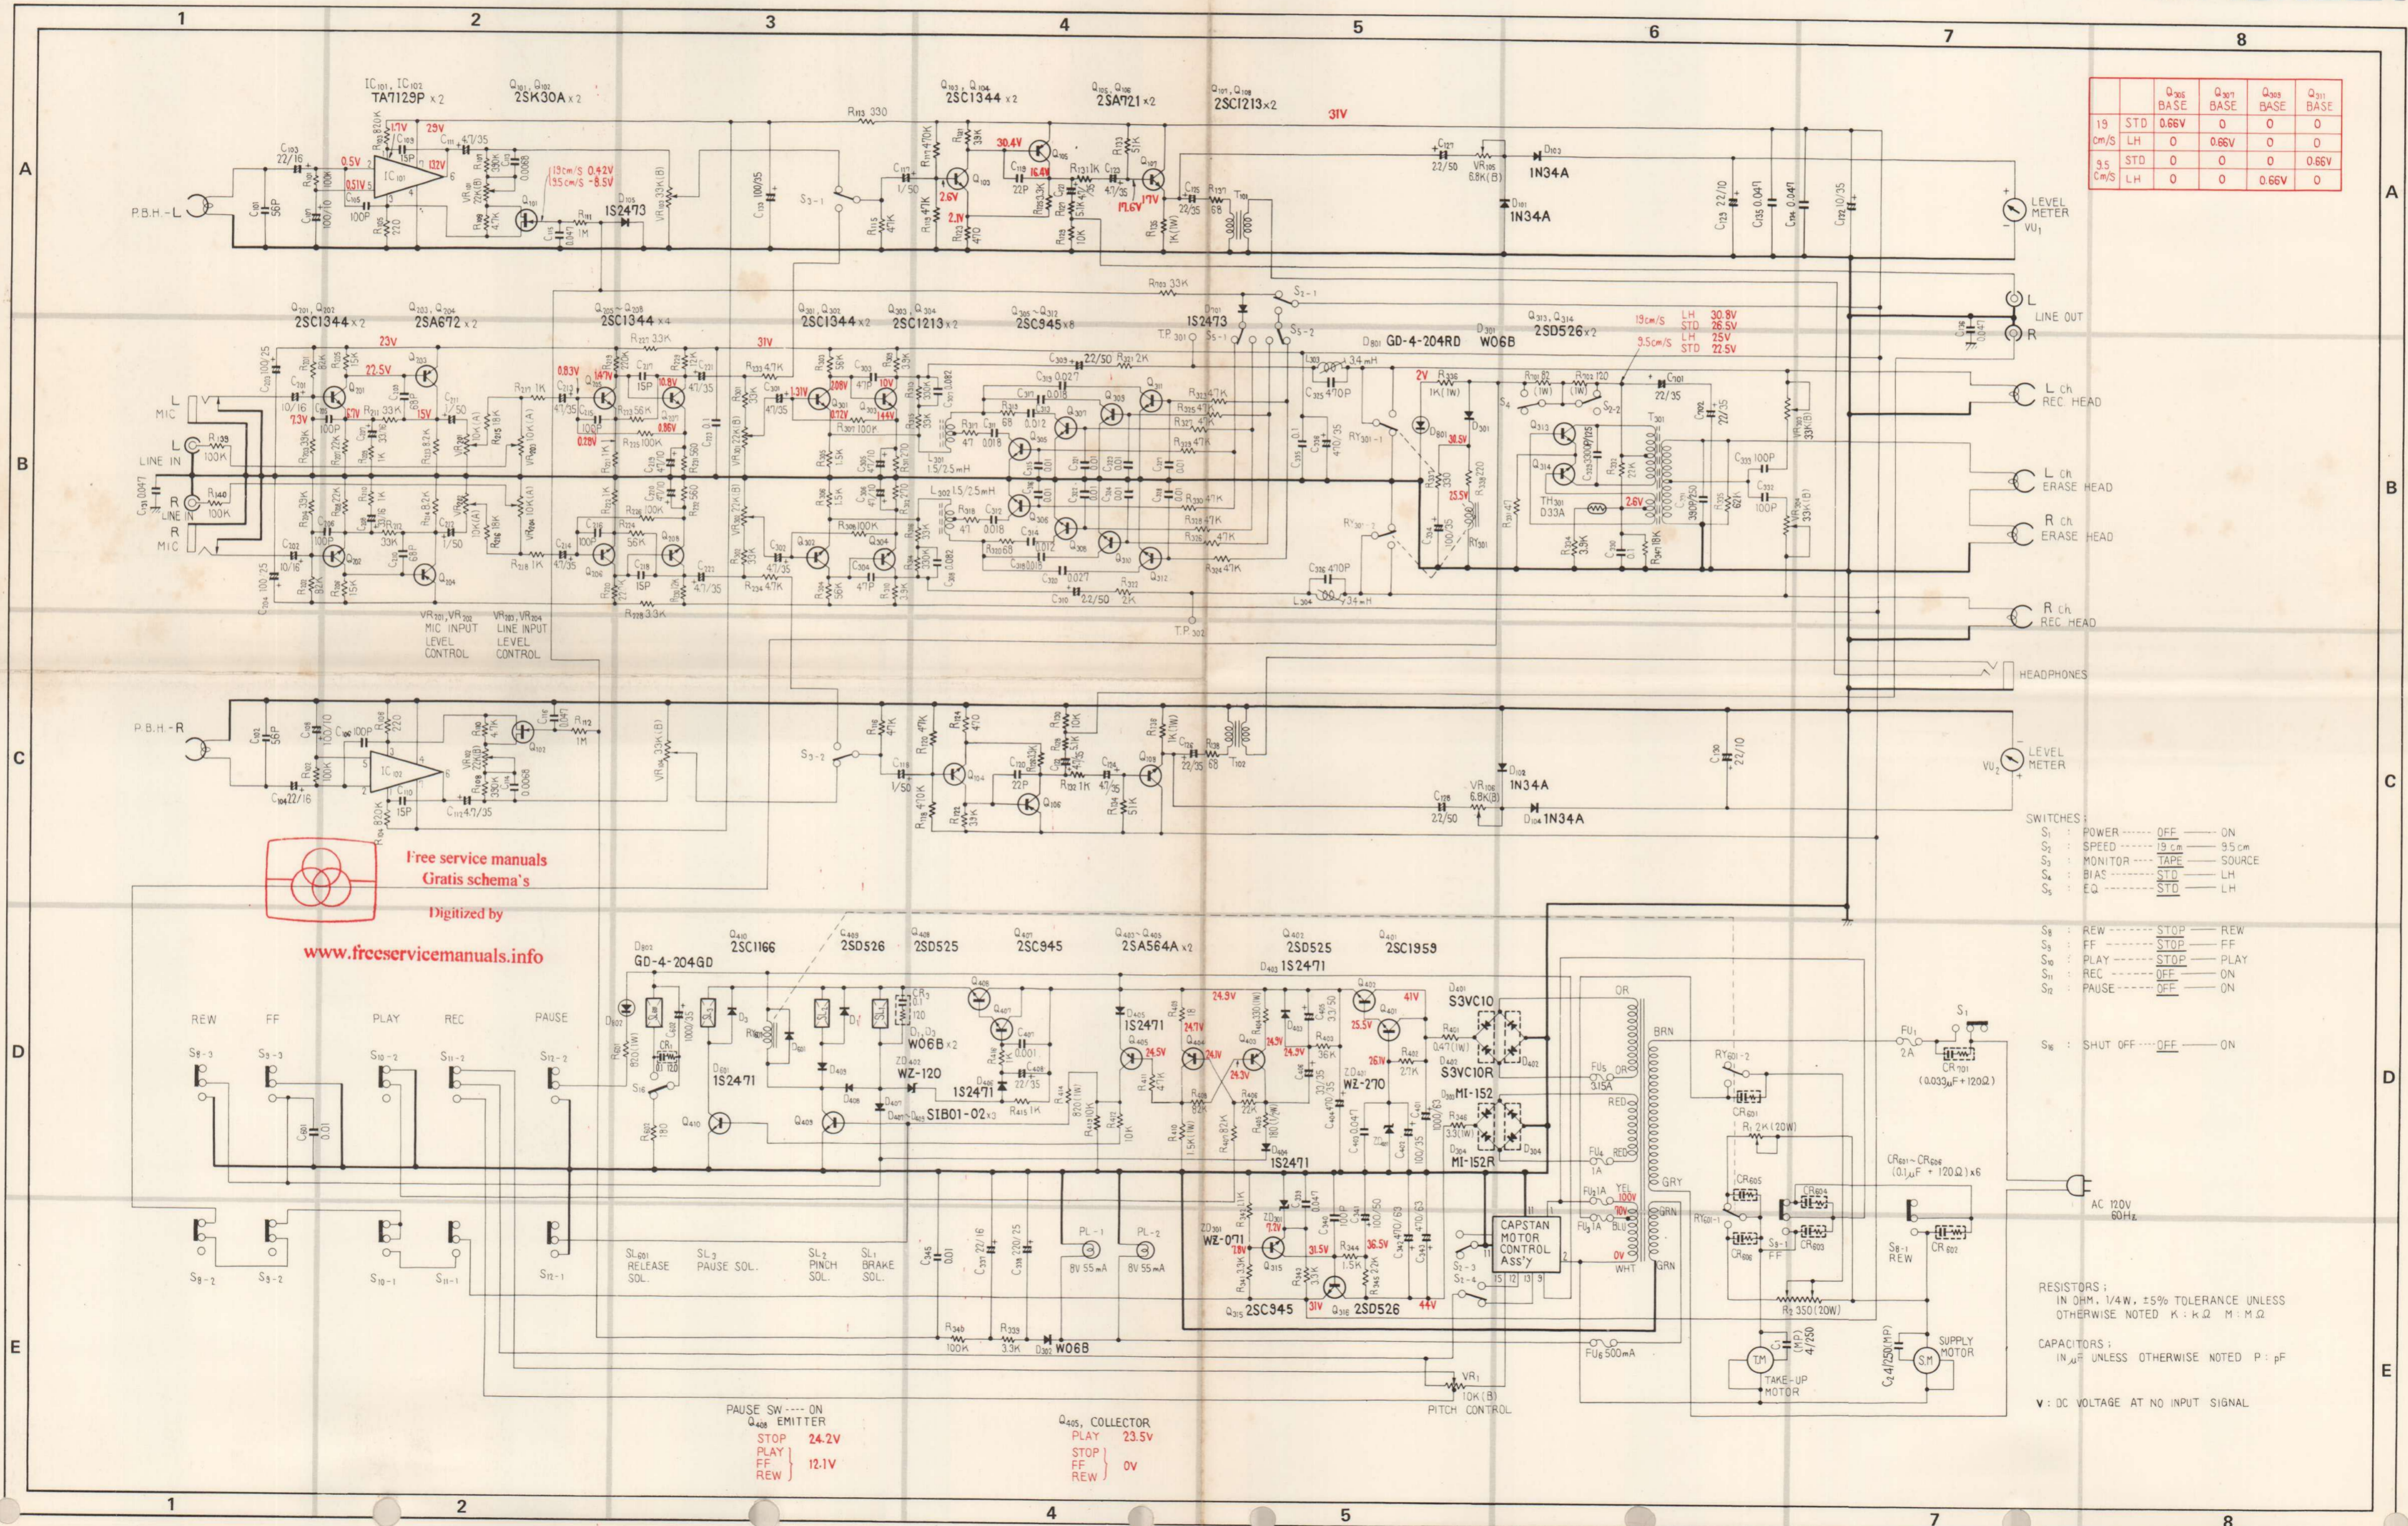

		Q <sub>305</sub> BASE	Q <sub>307</sub> BASE	Q <sub>309</sub> BASE	Q <sub>311</sub> BASE
19	STD	0.66V	0	0	0
	LH	0	0.66V	0	0
9.5	STD	0	0	0	0.66V
	LH	0	0	0.66V	0

Free service manuals  
Gratis schema's  
Digitized by  
www.freeservicemanuals.info

SWITCHES:  
 S<sub>1</sub>: POWER ---- OFF ---- ON  
 S<sub>2</sub>: SPEED ---- 19 cm/s ---- 9.5 cm/s  
 S<sub>3</sub>: MONITOR ---- TAPE ---- SOURCE  
 S<sub>4</sub>: BIAS ---- STD ---- LH  
 S<sub>5</sub>: EQ ---- STD ---- LH

S<sub>6</sub>: REW ---- STOP ---- REW  
 S<sub>7</sub>: FF ---- STOP ---- FF  
 S<sub>8</sub>: PLAY ---- STOP ---- PLAY  
 S<sub>9</sub>: REC ---- OFF ---- ON  
 S<sub>10</sub>: PAUSE ---- OFF ---- ON  
 S<sub>11</sub>: PAUSE ---- OFF ---- ON  
 S<sub>12</sub>: SHUT OFF ---- OFF ---- ON

RESISTORS:  
 IN OHM, 1/4W, ±5% TOLERANCE UNLESS  
 OTHERWISE NOTED K: kΩ M: MΩ

CAPACITORS:  
 IN μF UNLESS OTHERWISE NOTED P: pF

V: DC VOLTAGE AT NO INPUT SIGNAL

PAUSE SW ---- ON  
 Q<sub>408</sub> EMITTER  
 STOP 24.2V  
 PLAY 23.5V  
 FF 12.1V  
 REW 0V

Q<sub>405</sub> COLLECTOR  
 PLAY 23.5V  
 STOP 0V  
 FF 0V  
 REW 0V